

品牌	BOYA	长丰型号	BY-M1DM
----	------	------	---------



Introduction

Thanks for choosing BOYA!


The BOYA BY-M1DM is a Dual Lavalier Universal Microphone, with a single 1/8" connector, it can be used with smartphones, DSLR cameras, camcorders, audio recorders, PC and other recording devices.

It consists of two of the well-received omnidirectional lavalier microphones and 4m (13') length cable, it's perfect for interviews, presentations, podcasts, webcasts, or any situation where more than one subject needs to be recorded.

In order to ensure you have a good experience, please read this manual thoroughly and retain it for future reference.

Package Contents:

- One BY-M1DM Lavalier microphone
- Foam wind screen *2
- Clothing clip *2
- Velcro *2
- Battery (LR44)
- Carrying case
- User Manual

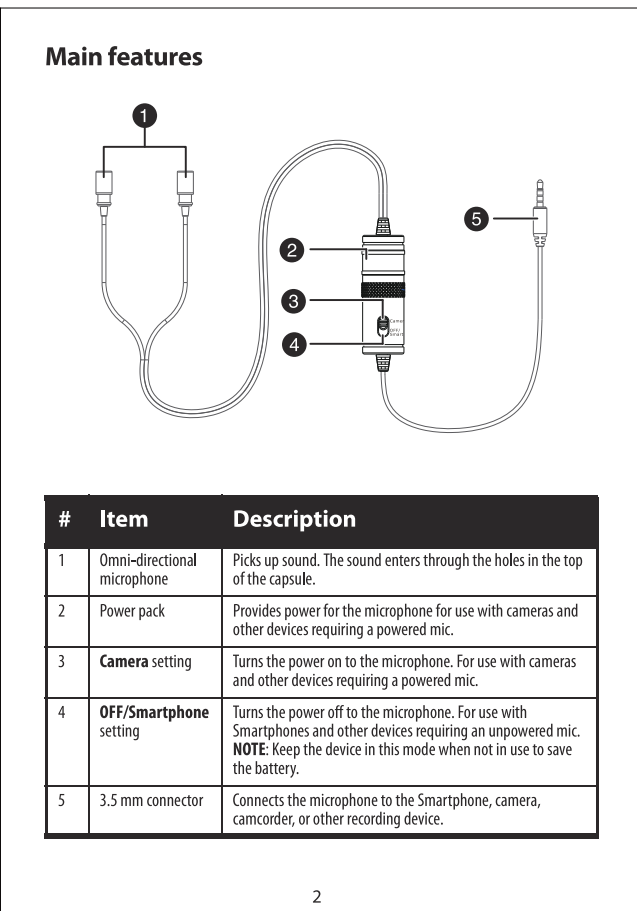

Features

- Clip-on lapel microphone for Smartphones, cameras, camcorders, audio recorders, PCs, and other audio/video recording devices
- Omni-directional Condenser Microphone
- Excellent for Interviews
- Improved Sensitivity and Signal-to-Noise
- Includes Carrying Pouch

Using the microphone

Attaching the microphone to the clothing clip

- Insert the microphone into the plastic loop on the clothing clip.

Mounting the microphone to your Clothing

Attach the microphone to the front of your clothing with the clothing clip, about 20-25cm (8-10 inches) from your face.

- 1) Attach the microphone upside down to reduce excessive breath noises and tonal inconsistencies due to head movements.
- 2) It is recommended that you use the foam wind screen at all times to avoid wind noise, even when recording inside.

Using the microphone with a Smartphone

Caution

No need to install battery when using with Smartphone.

- 1 Attach the microphone to your clothing (see previous instructions).
- 2 Move the switch on the power pack to the OFF/Smartphone.
- 3 Plug the 3.5 mm connector into the audio jack of your smartphone.
- 4 Open the audio-only or video recording app and begin recording.

Using the microphone with a camera

- 1 Install battery in right polarities.
- 2 Attach the microphone to your clothing (see previous instructions).
- 3 Move the switch on the power pack to the Camera (on) setting.
- 4 Plug the 3.5 mm connector into the audio input jack of your DSLR, Point and Shoot camera, or camcorder, and begin filming.

Note

Not all cameras have a microphone input. Verify this with your camera manufacturer. Many cameras have headphone, remote control, and other ports that look similar to a microphone input. Make sure that you are using the correct one.

Using the microphone with a laptop

Note

- 1) BOYA BY-M1DM can only use laptop whose headphone jack and microphone jack is combined.
- 2) No need to install battery.

- 1 Attach the microphone to your clothing (see previous instructions).
- 2 Move the switch on the power pack to the OFF/Smartphone.
- 3 Plug the 3.5 mm connector into the audio jack of your laptop.
- 4 Open the audio app and begin recording.

Using the microphone with other devices

- 1 Install battery in right polarities.
- 2 Attach the microphone to your clothing (see previous instructions).
- 3 Move the switch on the power pack to the Camera (on) setting.
- 4 Plug the 3.5 mm connector into the audio input jack of your device (audio recorder, amplifier etc.), and begin recording.

Note


- 1) When move switch on the power pack to the Camera (on), make sure to install battery in right polarities.
- 2) No need to install battery when OFF/ Smartphone setting.
- 3) Make sure set the switch first, then connect microphone with your equipment.

Replacing the battery

- 1 Unscrew the two parts of the power pack and separate the pieces.
- 2 Remove the old battery from its compartment in the power pack.
- 3 Place the new battery, with the + and - oriented as indicated, into the battery compartment in the power pack. The + symbol is stamped inside the compartment for reference.

Troubleshooting

Problem	Solution
The microphone does not turn on	The battery may be incorrectly oriented in the battery compartment. Open the battery compartment and make sure the battery is correctly installed. The battery may be exhausted. Replace it with a new one. See the Specifications section for compatible replacements. The battery terminals are dirty. Open the battery compartment and clean the terminals with a cotton swab.
The battery discharges too quickly	The microphone is being left on (in the Camera position). Turn off the microphone by moving the switch to the Off/Smartphone position. You are using the microphone in extremely hot or cold conditions which drains it quickly.
Too much ambience noise is being picked up	Make sure that the microphone is as close as possible to the subject. A certain amount of ambient noise is unavoidable in loud environments.

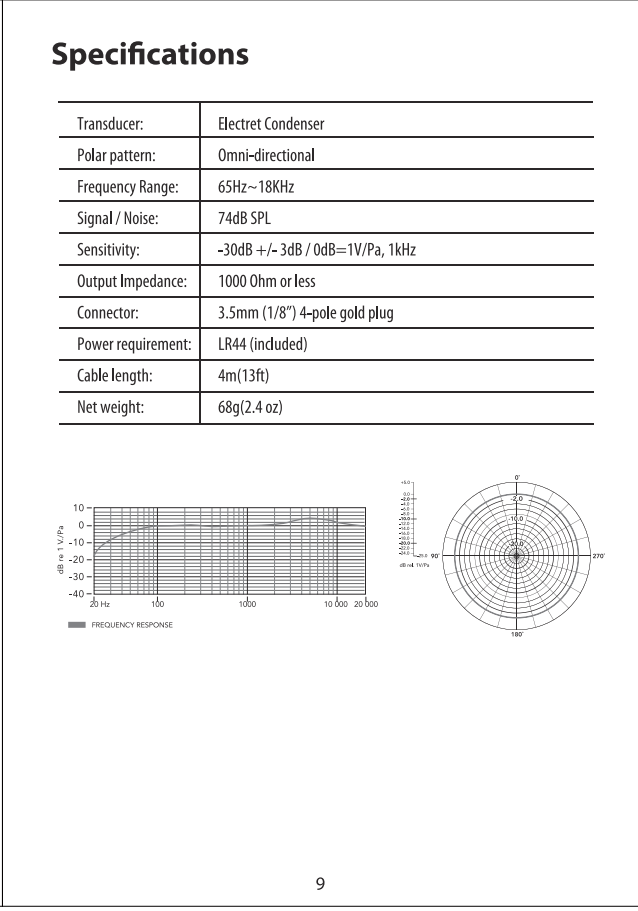

感谢您选择BOYA!

博雅BY-M1DM是双咪头的领夹麦克风,使用3.5毫米的插头, 可以用于手机、相机、摄像机、录音机、电脑或其他音频/视频录制设备。

BY-M1DM由两个全向型麦克风组成, 线长4米; 适用于采访、演示文稿、播客、网络直播等多种场景

产品清单

- BY-M1DM领夹麦克风
- 防风海绵*2
- 麦克风领夹 *2
- 魔术贴 *2
- 电池(LR44)
- 收纳袋
- 用户手册

产品结构

使用方法

把衣领夹子装在麦克风上

- 将衣领夹子插入上麦克风的塑料环上

把麦克风夹在衣服上

把麦克风夹在衣服上面, 离你的脸上大约20厘米

- 1) 将麦克风上下颠倒, 可以减少由于头部移动和呼吸引起的噪声。
- 2) 建议您随时使用防风棉, 以避免风噪, 即使在室内录音时也应保持使用。

麦克风用于手机

注意

用于智能手机时无需安装电池。

1. 把麦克风装在衣服上 (见前面的说明)
2. 将电源开关上的开关移到 OFF/Smartphone.
3. 将3.5毫米插头插入您智能手机的音频插孔中。
4. 打开音频或视频录制应用程序并开始录制。

麦克风用于相机

1. 安装电池。
2. 把麦克风装在衣服上 (见前面的说明)
3. 将电源开关上的开关移到 Camera (on) 的设置。
4. 将3.5毫米插头插入单反相机、摄像机的音频输入插孔, 然后开始拍摄。

注意

并非所有相机都有麦克风输入, 请与相机制造商核实。许多相机都有耳机监听, 遥控器和其他类似麦克风输入的端口, 请确保你使用的是正确的!

麦克风用于笔记本电脑

注意

- 1) BOYA BY-M1DM只能使用耳机插孔和麦克风插孔相结合的笔记本电脑。
- 2) 不需要安装电池。

1. 将麦克风连接到衣服上 (请参阅前面的说明)。
2. 将电源开关上的开关移到OFF/Smartphone的设置。
3. 将3.5毫米插头插入您笔记本电脑的音频插孔。
4. 打开音频应用程序并开始录制。

麦克风用于其他设备

1. 正确的安装电池
2. 将麦克风连接到衣服上 (请参阅前面的说明)。
3. 将电源开关上的开关移到Camera (on) 的设置。
4. 将3.5毫米插头插入设备的音频输入插孔 (录音机, 音响等) 然后开始录制!

注意


- 1) 将电源开关切换到 Camera (on)时,请确保电池安装正确。
- 2) 将电源开关切换到OFF/ Smartphone 设置时, 无需安装电池
- 3) 请先确认开关正确, 然后将麦克风连接到您的设备

更换电池

1. 拧开电源组的两部分并分开这些部件
2. 从电池组的隔间中取出旧电池。
使用非金属材料 (如牙签) 将电池轻轻向上提起。
当您抬起电池时, 请勿将电池左右推动, 否则它会粘在电池盒内。
3. 将新电池按照指示+和 - 放入电源组的电池舱中。+符号印在电池舱内以供参考。

故障排除

问题	解决方案
麦克风没有工作	电池可能安装不正确, 打开电池舱, 确保电池安装正确。 电池可能没电了, 换一个新的, 请参看更换电池部分进行更换。 电池端子很脏, 打开电池舱, 用棉签擦拭清除。 麦克风没电了 (开关停留在 Camera 设置上), 把麦克风并关移到OFF/ Smartphone 设置上。
电池耗电过快	在极端炎热或寒冷的条件下麦克风电池会消耗很快。
存在噪音	麦克风尽可能接近被录音主体, 少量的环境噪声在嘈杂环境中是不可避免的。

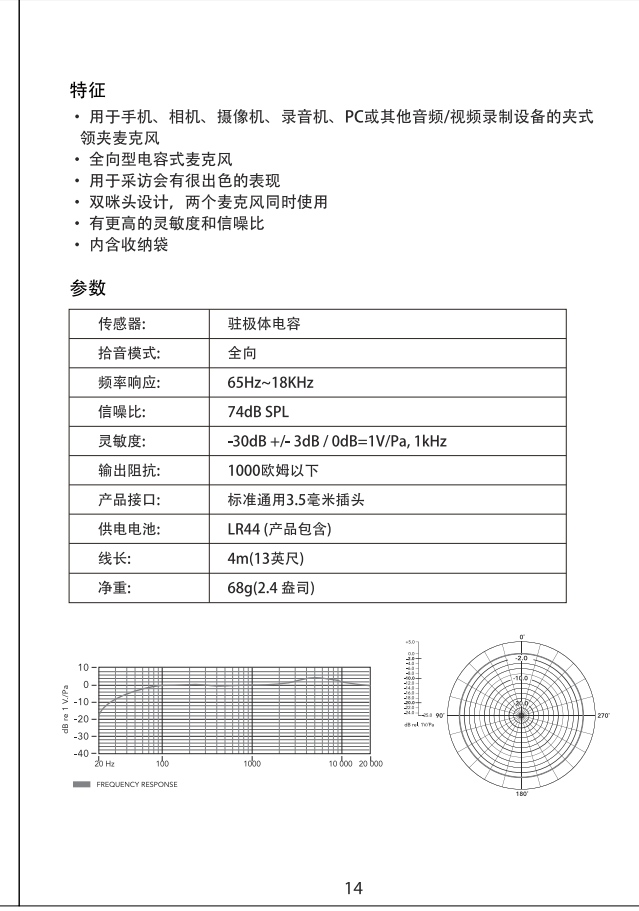

www.boyamicro.com

SHENZHEN JIAYZ PHOTO INDUSTRIAL, LTD.
The BOYA logo is a trademark which is registered and owned by Shenzhen Jiayz Photo Industrial., Ltd.
深圳市长丰影像器材有限公司
地址:广东省深圳市龙华区观澜街道大富社区硅谷动力智能终端产业园A16栋
TEL: 400 6131096
Email: sales@boyamicro.com
www.boyamicro.com / www.jiayz.com

技术要求:

- 1、表面无色差
- 2、无正负公差
- 3、包装标注尺寸为内尺寸

受控文件
2023/2/23
长丰影像

JIAYZ长丰 深圳市长丰影像器材有限公司	
子件名称	BY-M1DM说明书-N
子件编号	1F0300300526
材质	105g双铜纸 骑马钉 16P
尺寸	85x120
比例	1:1
单位	mm
设计/日期	高瑾璞 2022-7-04
审核	暂无
核准/日期	赵宏亮